


# 1981-88 Monte Carlo SS

## 2 Piece Quarter Panel Mounting Instructions

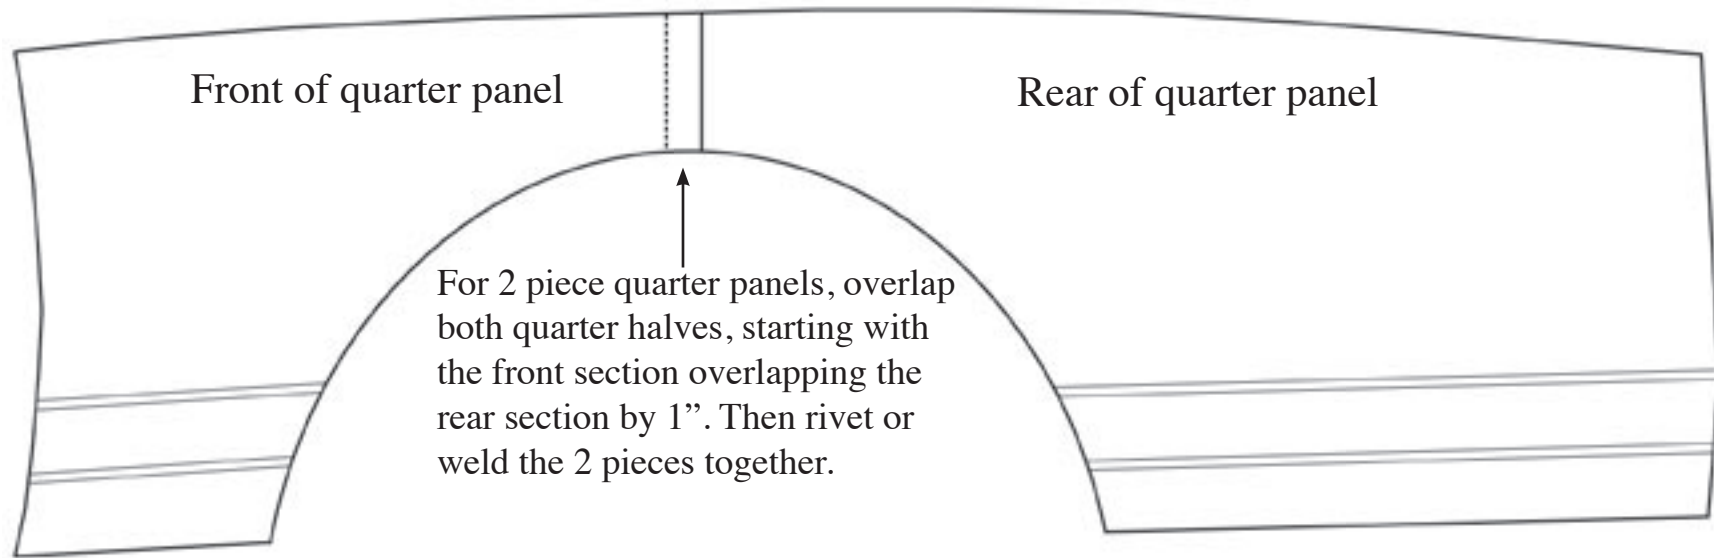

As shipping companies continue to update their shipping requirements the shipping costs for those requirements rise. Our Development Team works on new and innovative ways to save shipping costs without compromising the quality.




# Thanks For Your Business!



# 1981-88 Monte Carlo SS

## Quarter Panel Mounting Instructions

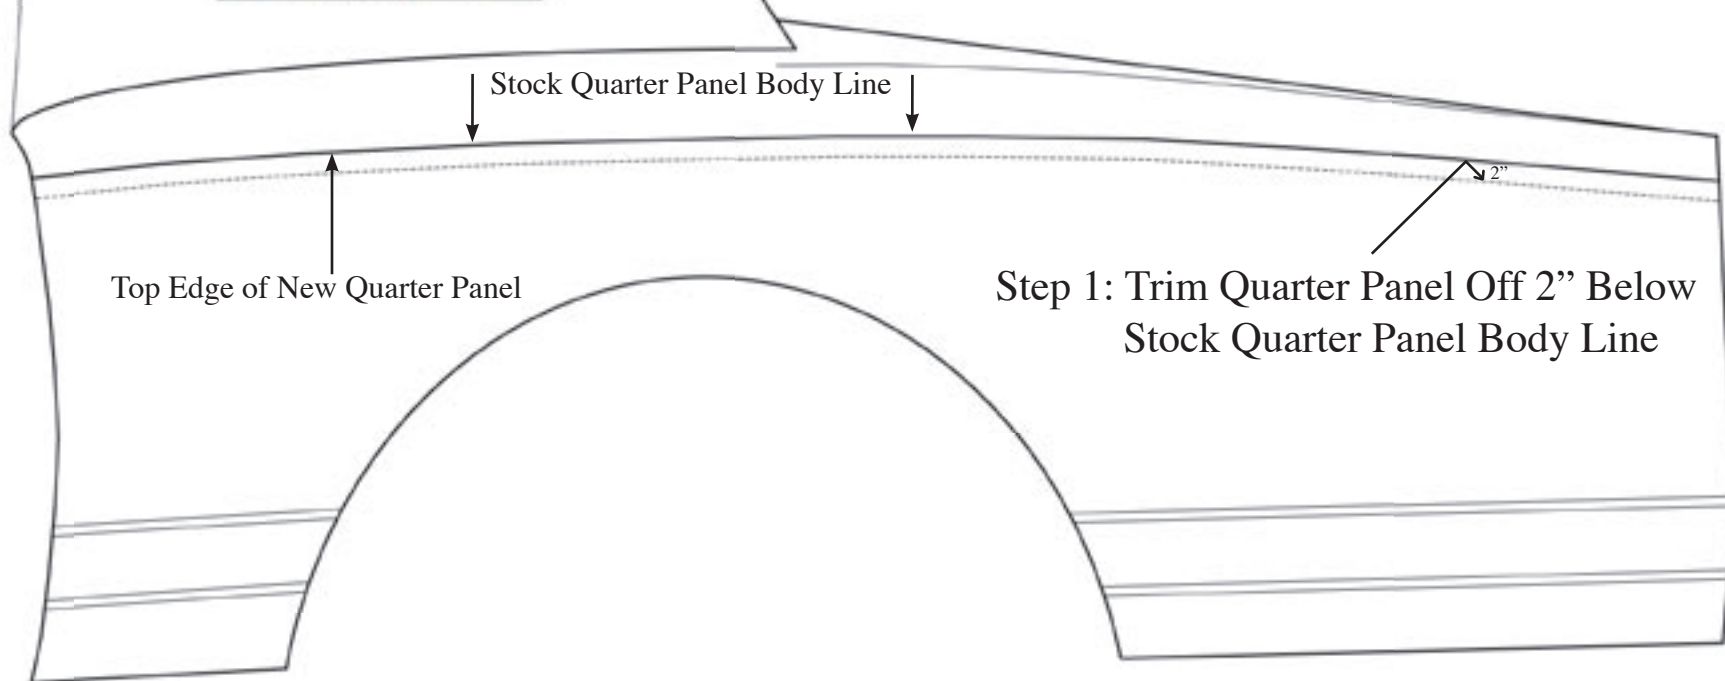

Step 1: Trim Quarter Panel Off 2'' Below Stock Quarter Panel Body Line

Step 1: Rivet or spot weld new quarter panel, lining top edge of new quarter panel up with stock quarter panel body line